




Instruction Manual

1. Product structure

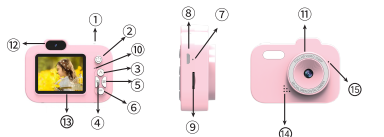

- ① Take a photo button
- ② Power button
- ③ Turn up the key
- ④ Left click
- ⑤ Right-click
- ⑥ Flip down key
- ⑦ Reset hole
- ⑧ Charging port
- ⑨ TF card slot
- ⑩ Indicator
- ⑪ Rear camera
- ⑫ Front camera
- ⑬ Display
- ⑭ Horn
- ⑮ Microphone

2. Description of button and interface function

1. Take a photo button

- 1) Short press the release photo button to enter the photo/video mode;
- 2) Set the mode, short press to take a photo to build the confirmation option;
- 3) Delete mode: short press to take a photo to confirm the deletion;

2. Power button

- 1) Press and hold for 3 seconds for the device to power on/off;
- 2) In working mode, short press this button to return to the main interface;

3. Up key

- 1) Main interface/setting mode: short, this key moves up to switch icon;
- 2) In photo mode, press this button to zoom in on the framing;
- 3) Album mode: Press this button to enter the prompt page for deleting photos or videos;

4. Left click/set key

- 1) The main interface mode is short, this key moves the toggle icon to the left;
- 2) In photo mode, press this key to enter the photo frame (only for HD camera);
- 3) Album mode: Press this button to switch to the previous photo/video;

5. Right-click/toggle key

- 1. In photo/video mode, short press this button to switch between the front and rear cameras (only for dual-lens models)
- 2) Album mode: Short press this button to switch to the next photo/video;

6. Down key

- 1) Main interface/setting mode: short, this key moves down to the toggle icon;
- 2) Press this button to zoom out the framing in photo mode;
- 3) Album mode: Press this button to enter the prompt page for deleting photos or videos;

7. Reset hole

- 1) When the machine has a fault, such as screen painting or crash, insert the reset button with a card pin to force the shutdown.

8. Charging and data interface

- 1) Interface Type: Type-C/Micro USB
- 2) It is used to connect an external power supply to charge the camera battery
- 3) It is used to connect to PC to transmit data (with data cable for transmission)

9.TF card slot

- 1) The capacity range supported by this machine is from 4GB to 32GB
- 2) Support format: FAT32
- 3) The TF card needs to be formatted on the unit before taking a photo

10. Indicator

- 1) Blue light: normal boot display;
- 2) Red light: charging (always on when charging, off when full)

11. Rear camera

- 1) For shooting/video viewfinder window

12. Front camera

- 1) For selfie shooting/video viewfinder (only for dual-lens models)

13. Display

- 1) It is used for camera operation and file viewing

14. Horn

- 1) Used to play video with sound/music emitted with sound

15. Microphone

- 1) It is used for sound input interface when recording

3. Basic introduction and operation instructions

Basic operation: Select one of them and press the photo button to enter, and press the power button to exit.

1. Photo mode

- 1) Select the photo function, when there is a TF card, the photo will be saved in the card;
- 2) Short press the photo button to take a photo, and hear the prompt sound click to indicate that the photo is completed;
- 3) Short press the right button to switch between the front/rear camera (only for dual-lens models);
- 4) Press the left button to switch between the photo frame and the speed mirror effect (only for HD camera);
- 5) Short press the upper button to enlarge the focal length, and press the short button to reduce the focal length;

2. Video recording mode

- 1) Select the video recording function, only allow video recording when there is a TF card; When the remaining empty space is insufficient, the elimination prompts "full card".
- 2) Short press the shutter button to record the video, and the indicator light starts to flash when recording, indicating the work In the middle of the process, short press the shutter button again to finish recording;

3. Album mode

- 1) Select the album function, view pictures and videos, and display the contents of the TF card first;
- 2) Short press the photo button to play or pause the video;
- 3) Short press the left/right button to select Videos & Photos;
- 4) Short press the up/down button to delete the file prompt, press the photo to confirm the deletion;

4. Set the mode

- 1) Select the setting function, short press and press the up/down button to select the menu option;
- 2) Short press the photo button to save the changes;

5. Game mode

- 1) Select the game function to enter the game menu interface;
- 2) Short press the left/right flip button to select the game;
- 3) Move left and right by turning left/right buttons, and press the OK button to confirm;

6. Music mode

- 1) Select the music function to enter the music menu interface;
- 2) Short press the up/down button to adjust the volume;
- 3) Move left and right by flipping left/right to switch music

(Note: MP3 files need to be copied to the designated folder of the TF card for normal use)

Fourth, common troubleshooting

Serial number	The type of failure	Solution
1	Won't turn on	Please try to power it on after charging
2	A memory card error is displayed	Please format the memory card or replace the memory card
3	The system freezes	Please use a steel pin to insert the reset hole and press and hold the reset button to reset
4	It cannot be charged	Please plug in the DC 5V1A charger with the random charging cable to charge

Notes:

- 1) This product is an electronic product, not waterproof, and shall not be used in water or near a fire source.
- 2) Built-in 3.7V non-removable battery, if damaged, please contact the merchant for repair.
- 3) Please use the specified power supply of this product for charging, do not use it during charging.
- 4) Do not disassemble by yourself, so as not to cause danger, and it cannot be guaranteed.
- 5) Do not drop or squeeze the camera to avoid damage to the internal electronic components.
- 6) This product contains small parts and is not suitable for children under 3 years of age.

5. Product parameters and specifications

Product name	Digital cameras
function	Take photos and videos
display screen	2.0-inch TFT color display
Battery voltage	3.7 V
Charging time	2 hours
Charging voltage	DC 5V 1A
Charging port	Type-C / Micro USB
What's in the Package:	Camera unit, charging cable, lanyard, manual




使用说明书

Instruction Manual

使用本产品前，请仔细阅读使用说明书
说明书仅供参考，具体操作以实物为准

一.产品结构

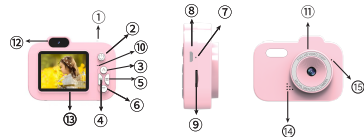

- | | | |
|-------|--------|--------|
| ① 拍照键 | ② 电源键 | ③ 上翻键 |
| ④ 左键 | ⑤ 右键 | ⑥ 下翻键 |
| ⑦ 复位孔 | ⑧ 充电口 | ⑨ TF卡槽 |
| ⑩ 指示灯 | ⑪ 后摄像头 | ⑫ 前摄像头 |
| ⑬ 显示屏 | ⑭ 喇叭 | ⑮ 麦克风 |

二、按键及接口功能说明

1.拍照键

- 1) 短按释放拍照键进入拍摄照片/录像模式；
- 2) 设置模式短按拍照键确认选项；
- 3) 删除模式短按拍照键确认删除；

2.电源键

- 1) 长按3秒用于设备开/关机；
- 2) 工作模式下短按此键返回主界面；

3.上键

- 1) 主界面/设置模式短此键向上移动切换图标；
- 2) 拍照模式按此键放大取景；
- 3) 相册模式按此键进入删除照片或视频提示页面；

4.左键/设置键

- 1) 主界面模式短此键向左移动切换图标；
- 2) 拍照模式按此键进入相框（仅用于高清相机）；
- 3) 相册模式按此键切换上一张照片/视频；

5.右键/切换键

- 1) 拍照/录像模式短按此键切换前后摄像头（仅用于双镜头机型）
- 2) 相册模式短按此键切换下一张照片/视频；

6.下键

- 1) 主界面/设置模式短此键向下移动切换图标；
- 2) 拍照模式按此键缩小取景；
- 3) 相册模式按此键进入删除照片或视频提示页面；

7.复位孔

- 1) 当机器出现画屏、死机等故障，用卡针插入复位键可强制关机。

8.充电及数据接口

- 1) 接口类型：Type-C / Micro USB
- 2) 用于连接外接电源给相机电池充电
- 3) 用于连接PC传输数据（需配带传输的数据线）

9.TF卡卡槽

- 1) 本机可支持容量范围：4GB至32GB
- 2) 支持格式：FAT32
- 3) TF卡需先在本机上进行格式化后再进行拍照

10.指示灯

- 1) 蓝灯：正常开机显示；
- 2) 红灯：充电（充电时常亮，充满灯灭）

11.后摄像头

- 1) 用于拍摄/录像取景窗口

12.前摄像头

- 1) 用于自拍拍摄/录像取景窗口（仅用于双镜头机型）

13.显示屏

- 1) 用于相机操作使用及查看文件

14.喇叭

- 1) 用于播放有声视频/音乐有声音发出

15.麦克风

- 1) 用于录像时声音输入接口

三、基本介绍和操作说明

基本操作：选择其中一项后短按拍照键进入，短按电源键退出。

1.拍照模式

- 1) 选择拍照功能，有TF卡时照片保存在卡里；
- 2) 短按拍照键拍照，听到提示音咔嚓表示拍照完成；
- 3) 短按右键切换前/后置摄像头（仅用于双镜头机型）；
- 4) 短按左键切换相框和速镜特效（仅用于高清相机）；
- 5) 短按上键放大焦距，短按下键缩小焦距；

2.录像模式

- 1) 选择录像功能，有TF卡时才允许录像；无卡时提示没有卡”，当剩余空不足时，消提示“满卡”。
- 2) 短按快门键进行录像，录常时指示灯开始闪烁，表明工作中，再次短按快门键录像结束；

3.相册模式

- 1) 选择相册功能，查看图片与视频，优先显示TF卡的内容；
- 2) 短按拍照键播放或暂停视频；
- 3) 短按左/右键选择视频与照片；
- 4) 短按上/下键可进行删除文件提示，按拍照键确认删除；

4.设置模式

- 1) 选择设置功能，短按按上/下键选择菜单选项；
- 2) 短按拍照键确以设置保存更改；

5.游戏模式

- 1) 选择游戏功能，进入游戏菜单界面；
- 2) 短按左/右翻键选择游戏；
- 3) 通过左翻/右翻键进行左右移动，短按OK键进行确认；

6.音乐模式

- 1) 选择音乐功能，进入音乐菜单界面；
- 2) 短按上/下键进行音量调节；
- 3) 通过左翻/右翻键进行左右移动可切换音乐

（注：MP3文件需拷贝到TF卡指定文件夹才能正常使用）

四、常见故障排除

序号	故障类型	解决方案
1	无法开机	请尝试充电后开机
2	提示内存卡错误	请格式化内存卡或者更换内存卡
3	系统死机	请使用钢针插入复位孔并长按复位键进行复位
4	不能充电	请用随机充电线插上DC 5V1A充电器充电

注意事项：

- 1) 本产品为电子产品，不防水，不得入水或者靠近火源使用。
- 2) 内置3.7V不可拆卸电池，如有损坏请联系商家进行维修。
- 3) 请使用本产品规定电源进行充电，充电过程中请勿使用。
- 4) 请勿自行拆卸，以免造成危险，且无法保修。
- 5) 请勿摔打或挤压相机，以免对内部电子元件造成损坏。
- 6) 本产品内含小部件，不适合3岁以下儿童使用。

五、产品参数与规格

产品名称	数码相机
功能	拍照、录像
显示屏	2.0英寸TFT彩色显示屏
电池电压	3.7V
充电时间	2小时
充电电压	DC 5V 1A
充电接口	Type-C / Micro USB
包装内含	相机主机、充电线、挂绳、说明书

