 
 


3+

# Kids Smartphone

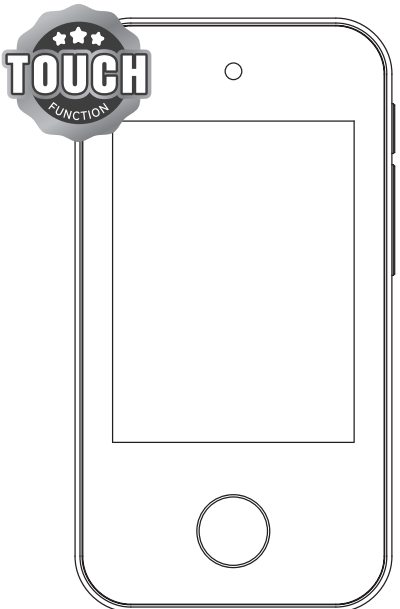

## Overview

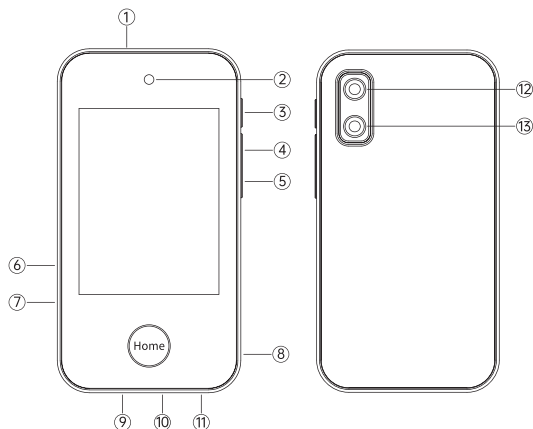 


- ① Horn
- ② Front camera
- ③ Power button
- ④ Volume +
- ⑤ Volume -
- ⑥ Reset switch
- ⑦ TF card slot
- ⑧ Lanyard hole
- ⑨ Earphone jack
- ⑩ Charging port
- ⑪ MIC
- ⑫ Camera
- ⑬ Flash

1

## Operation Guide

- Getting Start and Switching off
  - Long press the Power Button on the right side of the device to turn on.
  - Return back to the smartphone Wallpaper interface, and long press the Power Button to turn the device off.
- Please fully charge the phone before use.  
Charging Method: Connect the Type-C port with the smartphone, and USB port with 5V\_1A power adapter. When charging, the battery symbol will show charging. After full charged, battery symbol will show full.
- RESET Switch is used only when the phone is frozen.  
Frozen in one interface cannot turn off.  
Full charged, but cannot switch on.

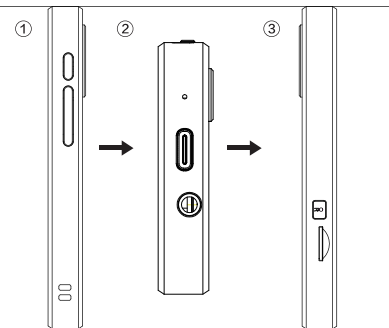

2

## Functions

- Desktop Shortcut
  - Click the "Flashlight" icon on the desktop shortcut key to enter the flashlight function directly.
  - Click the "Camera" icon to enter the camera function interface directly.
- Camera
  - Tap to take photos
  - Tap to shift the front and rear camera
  - Tap to view the photo gallery
  - Tap to shift to the Sticker Camera
- Phone Gallery
  - Tap Photo Gallery to browse the captured photos. The latest file will be shown first, tap the arrow icons or swipe the screen to see the previous or next file.
  - Tap Ash-bin on screen to delete the photo.

- Video Recorder
  - Tap the video icon on the screen to begin video recording.
  - Tap to stop and save the video recording.
  - Tap the to view video gallery.
  - To delete a file, tap "Options--Delete/Delete all files".
  - Tap to shift upward-facing and forward-facing camera.

3

- Video Player
  - Tap the video gallery icon to view videos players.
  - The latest file will be shown firstly.
  - Tap the arrow icons to see the previous or next video. To delete a file, tap Option to delete.

- Music Player
  - To upload music to the watch, use the Type-C USB cable to connect the smartphone to a computer/laptop. Copy any MP3 music files to the watch folder "My Music". After transferring is complete, safely eject the smartphone from your computer and unplug the USB cable.

- Voice Recorder
  - Tap to start voice record.
  - Tap to end voice record and save.
  - Tap to play voice record.
  - Tap to stop voice record.
  - Tap to delete voice record.

- Calculator
  - Use the calculator for basic calculations. Don't use this to cheat on tests, or you will never learn how to work out the answers by yourself.

- Calendar
  - Use the calendar to view the date. If the date shows incorrect, please go to the settings menu to reset the date and time information. (12 months, 12 types wallpapers)

4

- Alarm
  - Tap the Alarm icon to set the time, can-set 4 different alarms in one time.

- Stopwatch
  - Tap the play icon to start the stopwatch.
  - While the stopwatch is running, tap to pause the stopwatch, tap again to resume.
  - Tap to stop the stopwatch and reset the stopwatch to zero.

- Timer/Countdown
  - Use this activity to set a countdown timer.
  - Tap the Timer to set the time.
  - Tap the play icon to start the timer.
  - Tap to pause the timer.
  - Tap to stop the timer and reset the timer.

- Games
  - It comes with multiple puzzle games. Please follow the game instructions to operate.

5

Game controls:  
Select the game icon and click on it to enter the game;  
The key to switching games is to move the cursor to select the game,  
Control the game, touch control;  
Press Home to exit the game;

- Settings
  - Language: English, France, Spanish, Italian, German, Russian
  - Time and Date Setting
  - Volume Setting
  - LCD Setting: Brightness and Brightness Time setting
  - School Mode: Period Setting, Date Setting and ON-OFF

6

## Product Parameters

| Description       | Kids Smartphone                   |
|-------------------|-----------------------------------|
| Screen Size       | 2.8" IPS Screen                   |
| Screen Resolution | 240x320                           |
| Video Format      | AVI                               |
| Audio Format      | MP3                               |
| Battery Capacity  | 600mAh Li-on Rechargeable Battery |
| Charging Duration | 2-3 Hours                         |
| Duration          | 4-5 Hours                         |
| Input             | DC 5V/ 1A (Type C)                |
| Output            | 2W                                |
| Product Material  | ABS, Silicone                     |

7

## Troubleshooting

Please check the troubleshooting steps outlined below, and if you still have any issues, contact supplier support.

|   | Problems   | Solution   | Reference Pictures |
|---|--|--|--------------------|
| 1 | Screen freezes or blocks                             | Open the side silicone cover, and pull down the RESET dial and then dial it up to reset.   |                    |
| 2 | Serious noise  | Please check whether the earphone jack is clean, foreign matter can cause noise; Check whether the music file is damaged, and change other music to determine. If the file is damaged, it may cause serious noise or skipping. |                    |
| 3 | No sound after connecting with earphone or headphone | ① Please check if the volume is set to 0.<br>② Please check if the earphone or headphone are no problem and well connected.  |                    |
| 4 | Abnormal connection between phone and computer       | ① Check the connections if the USB transferring cable is well connected between phone and computer.<br>② Reset the kids smartphone and try again.<br>③ Unplug from the computer and reconnect.                                 |                    |

8

**Attention:**  
• Children 0-3 years old should use this product under the supervision of their parents  
• Do not use while charging  
• Do not put the product near fire

**WARNING**  
CHOKING HAZARD-Small Parts.  
Not for children under 3 years.

**WARNING**  
ERSTICKUNGSGEFAHR-Kleinteile.  
Nicht für Kinder unter 3 Jahren.

