 
 


Kids Smartphone

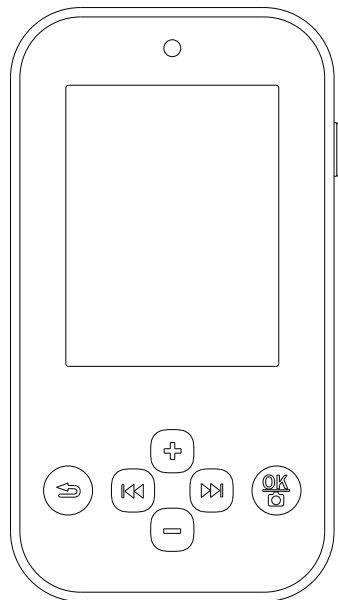 


Overview

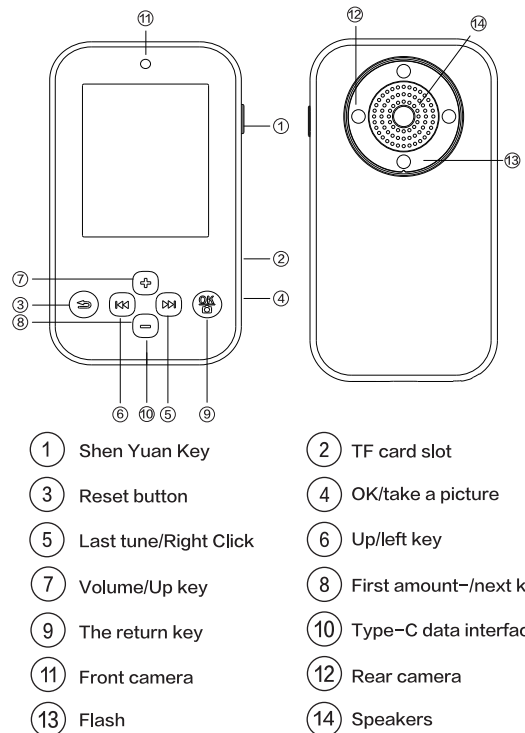

Operation Guide

1. Getting Start and Switching off
 - . Long press the Power Button on the right side of the device to turn on.
 - . Return back to the smartphone Wallpaper interface, and long press the Power Button to turn the device off.
2. Please fully charge the phone before use.
Charging Method: Connect the Type-C port with the smartphone, and USB port with 5V_1A power adapter. When charging, the battery symbol will show charging. After full charged, battery symbol will show full.
3. RESET Switch is used only when the phone is frozen.
.Frozen in one interface cannot turn off.
.Full charged, but cannot switch on.

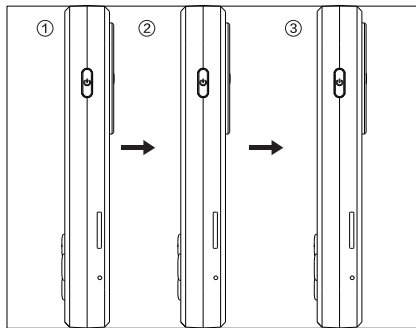

Functions

1. Desktop Shortcut
 - Click the "☀" icon on the desktop shortcut key to enter the flashlight function directly.
 - Click the "📷" icon to enter the camera function interface directly.
2. Camera
 - Tap 📷 to take photos
 - Tap 📷 to shift the front and rear camera
 - Tap 📷 to view the photo gallery
 - Tap 📷 to shift to the Sticker Camera
3. Phone Gallery
 - Tap Photo Gallery to browse the captured photos. The latest file will be shown first, tap the arrow icons or swipe the screen to see the previous or next file.
 - Tap Ash-bin on screen to delete the photo.
4. Video Recorder
 - Tap the video icon 📹 on the screen to begin video recording.
 - Tap to ⏏ stop and save the video recording.
 - Tap the 📷 to view video gallery.
 - To delete a file, tap "Options--Delete/Delete all files".
 - Tap 📷 to shift upward-facing and forward-facing camera.

5. Video Player
 - Tap the video gallery icon 📺 to view videos players.
 - The latest file will be shown firstly.
 - Tap the arrow icons to see the previous or next video. To delete a file, tap Option to delete.
6. Music Player
 - To upload music to the watch, use the Type-C USB cable to connect the smartphone to a computer/laptop. Copy any MP3 music files to the watch folder "My Music". After transferring is complete, safely eject the smartphone from your computer and unplug the USB cable.
7. Voice Recorder
 - Tap 🎤 to start voice record.
 - Tap 📄 to end voice record and save.
 - Tap 🎵 to play voice record.
 - Tap ⏏ to stop voice record.
 - Tap 🗑 to delete voice record.
8. Calculator
 - Use the calculator for basic calculations. Don't use this to cheat on tests, or you will never learn how to work out the answers by yourself.
9. Calendar
 - Use the calendar to view the date. If the date shows incorrect, please go to the settings menu to reset the date and time information. (12 months, 12 types wallpapers)

10. Alarm 
Tap the Alarm icon  to set the time, can-set 4 different alarms in one time.
11. Stopwatch 
Tap the play icon  to start the stopwatch. While the stopwatch is running, tap  to pause the stopwatch, tap  again to resume. Tap  to stop the stopwatch and reset the stopwatch to zero.
12. Timer/Countdown 
Use this activity to set a countdown timer. Tap the Timer to set the time. Tap the play icon  to start the timer. Tap  to pause the timer. Tap  to stop the timer and reset the timer.
13. Games 
There are 13 games built-in. Tap "Help" or "?" to learn game instruction. Game lists: Crawl 2048, Basketball Shoot Master, Pinball Hit Bricks, Car Grab Goods, Ultimate Racing, Bee War, Beauty Princess, Snake in the Grass, Finger-guessing, Table Tennis, Aircraft, Colorful Jerry, Sweet Together.

Game controls:
Select the game icon, press OK key into the game;
About the key to switch the game, select the game,
Press the power key into the game; OK key/A key, return Key/B key action control of the game, about key direction control;
press the power key to exit the game

 
14. Settings 
Language: English, France, Spanish, Italian, German, Russian
Time and Date Setting
Volume Setting
LCD Setting: Brightness and Brightness Time setting
School Mode: Period Setting, Date Setting and ON-OFF

Product Parameters

Description	Kids Smartphone
Screen Size	2.4" IPS Screen
Screen Resolution	240x320
Video Format	AVI
Audio Format	MP3
Battery Capacity	600mAh Li-on Rechargeable Battery
Charging Duration	2-3 Hours
Duration	4-5 Hours
Input	DC 5V/ 1A (Type C)
Output	2W
Product Material	ABS, Silicone

Troubleshooting

Please check the troubleshooting steps outlined below, and if you still have any issues, contact supplier support.

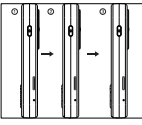	Problems	Solution	Reference Pictures
1	Screen freezes or blocks	Open the side silicone cover, and pull down the RESET dial and then dial it up to reset.	
2	Serious noise	Please check whether the earphone jack is clean, foreign matter can cause noise; Check whether the music file is damaged, and change other music to determine. If the file is damaged, it may cause serious noise or skipping.	
3	No sound after connecting with earphone or headphone	① Please check if the volume is set to 0. ② Please check if the earphone or headphone are no problem and well connected.	
4	Abnormal connection between phone and computer	① Check the connections if the USB transferring cable is well connected between phone and computer. ② Reset the kids smartphone and try again. ③ Unplug from the computer and reconnect.	

Attention:

- Children 0–3 years old should use this product under the supervision of their parents
- Do not use while charging
- Do not put the product near fire

! WARNING
CHOKING HAZARD-Small Parts.
Not for children under 3 years.

! WARNUNG
ERSTICKUNGSGEFAHR-Kleinteile.
Nicht für Kinder unter 3 Jahren.

