 


## High-Definition Digital Camera

Please read the instructions carefully before using this product The instructions are for reference only, and the specific operation is subject to the actual object

### Product structure Product description

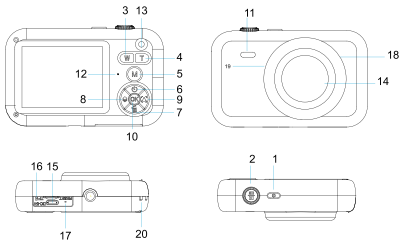

- |                         |                       |                        |
|-------------------------|-----------------------|------------------------|
| 1. The power button     | 2. The shutter button | 3. W key               |
| 4. T key                | 5. Mode Key           | 6. Time/up button      |
| 7. Delete/press the key | 8. Filter/left button | 9. Convert/right click |
| 10. OK                  | 11. Flash             | 12. Led Indicator      |
| 13. Front camera        | 14. Rear camera       | 15. USB direct port    |
| 16. TF card slot        | 17. Reset Hole        | 18. Horn               |
| 19. Nineteen. Nipple    |                       |                        |

### Introduction of button and interface function

- The power button  
Long Press for equipment on/off;
- The shutter button  
In photo/video mode, press this button to release the shutter and take a photo/video
- W key  
Photo mode by this key to reduce the focal length;
- T key  
In photo mode, press this button to enlarge the focal length;
- M (mode) key  
Short Press Toggle Mode (photo/video/settings) .
- Time/up button  
1 take photo/video mode short press this button to open the delay to take photos;  
2 Playback Mode Press this key to bring up the Delete sheet Settings;  
3 menu mode short press this button to select up.
- Delete/press the key  
1 take photo/video mode short press this button to turn flash on or off;  
2 playback mode short press this button to bring up all settings to delete;  
3 menu mode short press this button to select down.
- Filter/left key  
1 snap mode press this key to enter the filter/frame (effects in turn cycle) ;  
2 playback/menu mode click this key to select left.
- Switch/right key  
1 snap mode short press this key to switch camera before and after;  
2 playback/menu mode short press this key to select right.
- OK  
Confirm key: playback/menu mode short-press this key to play or pause. Switch button: Press this button to switch between front and rear cameras in photo/video mode.
- Flash  
It will flash when the camera is turned on

- LED indicator lamp  
1 blue light: normal boot display  
2 Red Light: charging charging often bright, full light off-RRB- .
- Front camera  
Use to take a selfie/video view window
- Rear Camera  
Used in the shot/video viewfinder window
- USB direct port  
1 Interface type: Type-C  
2 is used to connect an external power supply to charge the battery or provide working power.  
3 for connecting PC to transmit data;
- TF slot  
1 support capacity range: 8GB to 128GB  
2 support format: FAT32  
3 NOTE: the general capacity of more than 32GB TF card needs to be formatted on the local machine.
- Reset Hole,  
when the machine appears screen, crash and other faults, insert the reset key with the card needle can be forced to shut down

### Interface basic introduction and Operation Instructions

- Six features  
Photos, videos, albums, settings, games, music, such as pictures.  
Basic operation: select one-short press"OK" key to enter, short press "M" key to exit.
- Photo mode  
1 Select the camera function to save the picture in Kari when the FF card is available;  
2 and press confirm shutter [ to take a picture with the door, the location range will change from red to yellow when the picture is taken;  
3 and wipe when the sound is heard to indicate that the picture has been taken;

- after-camera short press key to bring up the flash;  
5 long press the right button to switch/rear camera;  
6 short press the left button to switch picture frames and quick-lens effects;  
7 short press the T key to enlarge the focal length, short press the w key to reduce the focal length;
- Video mode  
1 Select the video recording function, f card is allowed to record: no card when the prompt no card; when the remaining empty enough to cancel the prompt"Full card;"  
2 Short Press shutter button to record video. When recording, the light starts flashing, indicating that the recording is over.  
3 Short Press shutter button to record in slow motion or time-lapse.  
4 Short Press left button to bring up the filter.  
5 Short press down link to bring up screensaver;
- Playback mode  
1 select playback function, check with video, priority Display T card content  
2 short press Ok key play or pause video:  
3 short press about key select drop video and photos:  
4 short on key to delete a single file:  
5 Short Press Key to delete all files:
- Set the mode  
1 short press the up/down key to select the Radio Option:  
2 Short Press OK key to set to save the summer change
- Game mode  
1 select the game function, enter the game single interface:  
2 short press the left/right flip key to select the game:

### Product warranty card

Certificate of conformity




|                  |  |
|------------------|--|
| Purchase date    |  |
| Purchase address |  |
| Contact person   |  |
| Contact number   |  |
| Contact address  |  |
| Remark           |  |

### Product specification

|                     |                                                        |
|---------------------|--------------------------------------------------------|
| Product name        | Hd digital camera                                      |
| Model number        | Y11                                                    |
| Feature             | Photos, videos, games, music                           |
| Language            | 13 types (customizable)                                |
| Image sensor        | 1 million pixels                                       |
| LED display         | 2. 4-inch TFT color display                            |
| Battery capacity    | 800 mAh                                                |
| Memory card         | TF card support (8CB to 128GB, FAT32 format)           |
| Charging voltage    | DC 5V 1A                                               |
| port                | Type-C USB, IF card slot, and battery compartment      |
| Product weight      | 78g                                                    |
| Product size        | 95*60*28mm                                             |
| Video resolution    | 1080FHD: 1080P : 720P :WVGA ; VGA                      |
| Picture resolution  | 44M: 36M: 24M: 20M: 16M: 12M: 10M: 7M: 5M: 3M: 2M;1.3M |
| Timed photography   | Off /2 seconds /5 seconds /10 seconds                  |
| continuous shooting | Off, on (default 5)                                    |
| delete              | Delete single sheet, delete all zoom multiples         |
| Zoom ratio          | 16X                                                    |
| Time setting        | Turn off, turn on, set the time                        |
| Automatic shutdown  | Off, 1 minute, 2 minutes, 3 minutes, 5 minutes         |

### Attention:

This product should not be used in water or near fire sources. Built-in 3.7V non-removable battery, if damaged, please contact the business for repair.  
Please use the specified power supply of this product to charge, do not use during the charging process.  
This product contains small parts and is not suitable for children under 3 years of age.

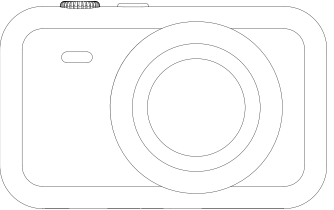


## 高清数码相机

### 使用说明书

使用本产品前，请仔细阅读使用说明书  
说明书仅供参考，具体操作以实物为准

### 产品结构 产品说明

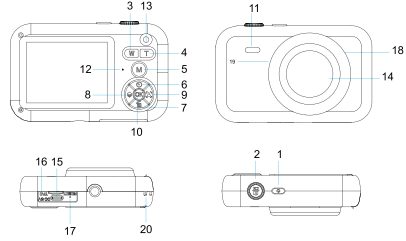

- |          |          |             |
|----------|----------|-------------|
| 1. 电源键   | 2. 快门键   | 3. W键       |
| 4. T键    | 5. 模式键   | 6. 定时/上键    |
| 7. 删除/下键 | 8. 滤镜/左键 | 9. 转换/右键    |
| 10. OK键  | 11. 闪光灯  | 12. LED指示灯  |
| 13. 前镜头  | 14. 后镜头  | 15. USB直接接口 |
| 16. TF卡槽 | 17. 复位孔  | 18. 喇叭      |
| 19. 咪头   |          |             |

### 按键及接口功能介绍

- 电源键  
长按用于设备开/关机；
- 快门键  
拍照/录像模式短按此键释放快门并拍摄照片/视频。
- W键  
拍照模式按此键缩小焦距；
- T键  
拍照模式按此键放大焦距；
- M(模式)键  
短按切换模式(拍照/录像/设置)。
- 定时/上键  
①拍照/录像模式短按此键打开延时拍照；  
②回放模式短按此键调出删除单张设置；  
③菜单模式短按此键为向上选择。
- 删除/下键。  
①拍照/录像模式短按此键打开或关闭闪光灯；  
②回放模式短按此键调出删除全部设置；  
③菜单模式短按此键为向下选择。
- 滤镜/左键  
①拍照模式短按此键进入滤镜/相框(效果依次循环)；  
②回放/菜单模式短按此键为向左选择。
- 转换/右键  
①拍照模式短按此键转换前后摄像头；  
②回放/菜单模式短按此键为向右选择。
- OK键  
确认键:回放/菜单模式短按此键播放或暂停。  
切换键:拍照/录像模式下按此键切换前后摄像头。
- 闪光灯  
开启后拍照时会闪光

- LED指示灯  
①蓝灯:正常开机显示  
②红灯:充电(充电时常亮，充满灯灭)。
- 前镜头  
用于自拍拍摄/录像取景窗口
- 后镜头  
用于拍摄/录像取景窗口
- USB直接接口  
①接口类型: Type-C  
②用于连接外接电源给电池充电或提供工作电源。  
③用于连接PC传输数据；
- TF卡槽  
①支持容量范围: 8GB至128GB  
②支持格式: FAT32  
注释:一般容量超过32GB的TF卡需先在本机上进行格式化。
- 复位孔  
当机器出现画屏、死机等故障，用卡针插入复位键可强制关机。

### 界面基本介绍和操作说明

六大功能  
照像、录像、相册、设置、游戏、音乐如图。  
基本操作:选择其中- -项后短按“OK”键进入，短按“M”键退出。

- 拍照模式  
①选择拍照功能，有FF卡时照片保存在卡里；  
②短按确认/快门拍照，定时定位程由红色成黄色；  
③听到提示音时擦表示拍照完成；  
④后摄时短按下键调出闪光灯；  
⑤长按右翻键切换的/后置摄像头；  
⑥短按左键切换相框和滤镜特效；  
⑦短按T键放大焦距，短按W键缩小焦距

- 录像模式  
①选择录像功能，有F卡时才允许录像:无卡时提示没有卡”，当剩余空不足时，消提示“满卡”。  
②短按快门键进行录像，录常时指示灯开始闪烁，表明工作中，再次短按快门键录像结束；  
③短上键调出慢动作或者延时摄影；  
④短按左键调出滤镜；  
⑤短按下键调出屏保；
- 回放模式  
①选择回放功能，查看与视频，优先显示T卡的内容  
②短按OK键播放或暂停视频；  
③短按左右键选择视频与照片；  
④短按上键可进行删除单个文件:。  
⑤短按下键可进行删除全部文件:
- 设置模式  
①短按按上/下键选择菜单选项:  
②短按OK键确以设置保存更改
- 游戏模式  
①选择游戏功能，进入游戏菜单界面:  
②短按左/右翻键选择游戏:

### 产品保修卡

|      |  |
|------|--|
| 购机日期 |  |
| 购机地址 |  |
| 联系人  |  |
| 联系电话 |  |
| 联系地址 |  |
| 备注   |  |

### 合格证



### 产品规格

|        |                                                        |
|--------|--------------------------------------------------------|
| 产品名称   | 高清数码相机                                                 |
| 型号     | Y11                                                    |
| 功能     | 拍照、录像、游戏、音乐                                            |
| 语言     | 13种(可定制)                                               |
| 图像传感器  | 100万像素                                                 |
| LED显示屏 | 2. 4英寸TFT彩色显示屏                                         |
| 电池容量   | 800 mAh                                                |
| 内存卡    | 支持TF卡(8CB至128GB, FAT32 格式)                             |
| 充电电压   | DC 5V 1A                                               |
| 接口     | Type-C USB、IF卡槽、电池仓                                    |
| 产品重量   | 78g                                                    |
| 产品尺寸   | 95*60*28mm                                             |
| 录像分辨率  | 1080FHD: 1080P : 720P :WVGA ; VGA                      |
| 图片分辨率  | 44M: 36M: 24M: 20M: 16M: 12M: 10M: 7M: 5M: 3M: 2M;1.3M |
| 定时拍照   | 关闭/2秒/5秒/10秒                                           |
| 连拍     | 关、开(默认5张)                                              |
| 删除     | 删除单张、删除全部 变焦倍数                                         |
| 变焦倍数   | 16X                                                    |
| 时间设置   | 关、开、设置时间                                               |
| 自动关机   | 关、1分钟、2分钟、3分钟、5分钟                                      |

### 注意:

本产品不得入水或者靠近火源使用。  
内置3.7V不可拆卸电池，如有损坏请联系商家进行维修。  
请使用本产品规定电源进行充电，充电过程中请勿使用。  
本产品内含小部件，不适合3岁以下儿童使用。