


# Instruction Manual

## 1. Product structure

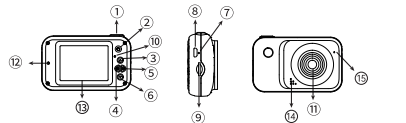

- ① Take a photo button
- ② Power button
- ③ Turn up the key
- ④ Left click
- ⑤ Right-click
- ⑥ Flip down key
- ⑦ Reset hole
- ⑧ Charging port
- ⑨ TF card slot
- ⑩ Indicator
- ⑪ Rear camera
- ⑫ Front camera
- ⑬ Display
- ⑭ Horn
- ⑮ Microphone

## 2. Description of button and interface function

### 1. Take a photo button

- 1) Short press the release photo button to enter the photo/video mode;
- 2) Set the mode, short press to take a photo to build the confirmation option;
- 3) Delete mode: short press to take a photo to confirm the deletion;

### 2. Power button

- 1) Press and hold for 3 seconds for the device to power on/off;
- 2) In working mode, short press this button to return to the main interface;

### 3. Up key

- 1) Main interface/setting mode: short, this key moves up to switch icon;
- 2) In photo mode, press this button to zoom in on the framing;
- 3) Album mode: Press this button to enter the prompt page for deleting photos or videos;

### 4. Left click/set key

- 1) The main interface mode is short, this key moves the toggle icon to the left;
- 2) In photo mode, press this key to enter the photo frame (only for HD camera);
- 3) Album mode: Press this button to switch to the previous photo/video;

### 5. Right-click/toggle key

- 1. In photo/video mode, short press this button to switch between the front and rear cameras (only for dual-lens models)
- 2) Album mode: Short press this button to switch to the next photo/video;

### 6. Down key

- 1) Main interface/setting mode: short, this key moves down to the toggle icon;
- 2) Press this button to zoom out the framing in photo mode;
- 3) Album mode: Press this button to enter the prompt page for deleting photos or videos;

### 7. Reset hole

- 1) When the machine has a fault, such as screen painting or crash, insert the reset button with a card pin to force the shutdown.

### 8. Charging and data interface

- 1) Interface Type: Type-C/Micro USB
- 2) It is used to connect an external power supply to charge the camera battery
- 3) It is used to connect to PC to transmit data (with data cable for transmission)

### 9.TF card slot

- 1) The capacity range supported by this machine is from 4GB to 32GB
- 2) Support format: FAT32
- 3) The TF card needs to be formatted on the unit before taking a photo

### 10. Indicator

- 1) Blue light: normal boot display;
- 2) Red light: charging (always on when charging, off when full)

### 11. Rear camera

- 1) For shooting/video viewfinder window

### 12. Front camera

- 1) For selfie shooting/video viewfinder (only for dual-lens models)

### 13. Display

- 1) It is used for camera operation and file viewing

### 14. Horn

- 1) Used to play video with sound/music emitted with sound

### 15. Microphone

- 1) It is used for sound input interface when recording

## 3. Basic introduction and operation instructions

Basic operation: Select one of them and press the photo button to enter, and press the power button to exit.

### 1. Photo mode

- 1) Select the photo function, when there is a TF card, the photo will be saved in the card;
- 2) Short press the photo button to take a photo, and hear the prompt sound click to indicate that the photo is completed;
- 3) Short press the right button to switch between the front/rear camera (only for dual-lens models);
- 4) Press the left button to switch between the photo frame and the speed mirror effect (only for HD camera);
- 5) Short press the upper button to enlarge the focal length, and press the short button to reduce the focal length;

### 2. Video recording mode

- 1) Select the video recording function, only allow video recording when there is a TF card; When the remaining empty space is insufficient, the elimination prompts "full card".
- 2) Short press the shutter button to record the video, and the indicator light starts to flash when recording, indicating the work In the middle of the process, short press the shutter button again to finish recording;

### 3. Album mode

- 1) Select the album function, view pictures and videos, and display the contents of the TF card first;
- 2) Short press the photo button to play or pause the video;
- 3) Short press the left/right button to select Videos & Photos;
- 4) Short press the up/down button to delete the file prompt, press the photo to confirm the deletion;

### 4. Set the mode

- 1) Select the setting function, short press and press the up/down button to select the menu option;
- 2) Short press the photo button to save the changes;

### 5. Game mode

- 1) Select the game function to enter the game menu interface;
- 2) Short press the left/right flip button to select the game;
- 3) Move left and right by turning left/right buttons, and press the OK button to confirm;

### 6. Music mode

- 1) Select the music function to enter the music menu interface;
- 2) Short press the up/down button to adjust the volume;
- 3) Move left and right by flipping left/right to switch music

(Note: MP3 files need to be copied to the designated folder of the TF card for normal use)

## Fourth, common troubleshooting

| Serial number | The type of failure              | Solution                                                                                     |
|---------------|----------------------------------|----------------------------------------------------------------------------------------------|
| 1             | Won't turn on                    | Please try to power it on after charging                                                     |
| 2             | A memory card error is displayed | Please format the memory card or replace the memory card                                     |
| 3             | The system freezes               | Please use a steel pin to insert the reset hole and press and hold the reset button to reset |
| 4             | It cannot be charged             | Please plug in the DC 5V1A charger with the random charging cable to charge                  |

## Notes:

- 1) This product is an electronic product, not waterproof, and shall not be used in water or near a fire source.
- 2) Built-in 3.7V non-removable battery, if damaged, please contact the merchant for repair.
- 3) Please use the specified power supply of this product for charging, do not use it during charging.
- 4) Do not disassemble by yourself, so as not to cause danger, and it cannot be guaranteed.
- 5) Do not drop or squeeze the camera to avoid damage to the internal electronic components.
- 6) This product contains small parts and is not suitable for children under 3 years of age.

## 5. Product parameters and specifications

|                        |                                              |
|------------------------|----------------------------------------------|
| Product name           | Digital cameras                              |
| function               | Take photos and videos                       |
| display screen         | 2.4-inch TFT color display                   |
| Battery voltage        | 3.7 V                                        |
| Charging time          | 2 hours                                      |
| Charging voltage       | DC 5V 1A                                     |
| Charging port          | Type-C / Micro USB                           |
| What's in the Package: | Camera unit, charging cable, lanyard, manual |