 
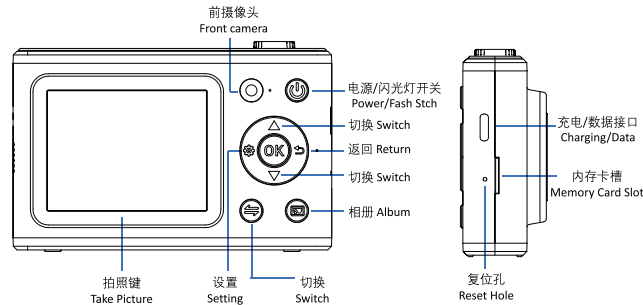 
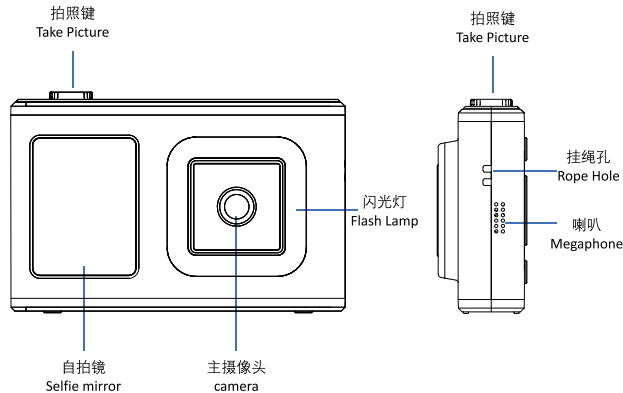 


VINTAGE DIGITAL CAMERA

说明书 / Instructions

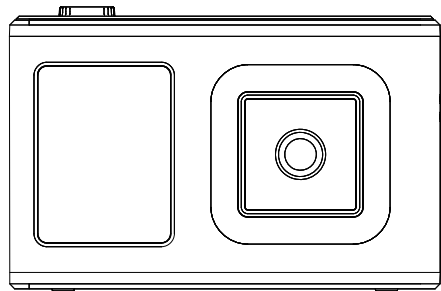 


按键功能 Button Description

-  电源/闪光灯键:长按2秒开关机:拍照界面按一次开启自动闪光灯, 按两下开启闪光灯常亮。
Power/Flash button: Long press 2 seconds to turn on/off; On the camera screen, press once to turn on the automatic flash and press twice to turn on the flash.
-  设置键:进入设置菜单; 相册界面按下可删除照片, 按OK键确认。
Setting key, enter the settings menu; Press the album interface to delete photos, press OK to confirm.
-  上切换:拍照界面按下后可切换大头贴和滤镜, 长按放大焦距, 相册界面下切换照片。
Switch :In the photo interface, press down to switch between the tack and filter, long press to enlarge the focal length, and switch photos under the album interface.
-  下切换:拍照界面短按下后可切换大头贴和滤镜, 长按缩小焦距, 相册界面下切换照片。
Switch: In the photo interface, short press to switch the tack and filter, long press to reduce the focal length, and switch photos under the album interface.
-  转换键:单按切换前后镜头。
Convert key: Single press to switch front and rear lenses
-  相册: 拍照/录像模式下按此键进入图库, 再按一次返回拍照。
Album: In Photo/video mode, press this key to enter the gallery, and press again to return and take photos.
-  返回: 设置模式返回上一级, 功能模式退出返回主界面。
Return : Set mode returns to the upper level, function mode exits to return to the main interface.
-  内存卡槽: 按正确的方向插入内存卡, 最大支持32GB. 提示内存卡错误时, 请格式化内存卡。
Memay cand sler Insert the memory card in the - mum suppon is 32GB if a memay candemor message isdpl fmat#ememory ard
-  复位键: 如遇到相机无法关机、卡机等故障、请用牙签或钢针插入复位孔按一下复位键, 自动关机后重新开机, 即可恢复出厂设置。
Reset Button:If the camera can't be turned ofor crashes, please use toothpickorsteel needle to insert reset hole, press the Reset Button, turn it on again after automatic shut-down, then it can restore factory settings.

照片导出方式 How to export photos

- 1.使用数据线连接电脑，即可边充电边读取相机内的数据。
Connect the computer with a data cable, and you can read the data in the camera while chargin#
- 2.按下侧面的内存卡，即可弹出，使用读卡器可连接至电脑读取照片。
Press the memory card on the side to pop up, anduse the card reader to connect to the computer to read photos
- 3.使用OTG读卡器，可将相机内的照片传输至手机； 安卓用户请使用Type-C接口读卡器； iPhone手机请使用对应接口的读卡器， *15代iphone已升级至Type-C接口。
With an OTG card reader, you can transfer photos from your camera to your phone. Android users should use the Type-C interface card reader; For iPhones, please use the card reader with the corresponding interface, *The 15th generation iPhone has been upgraded to the Type-C port.

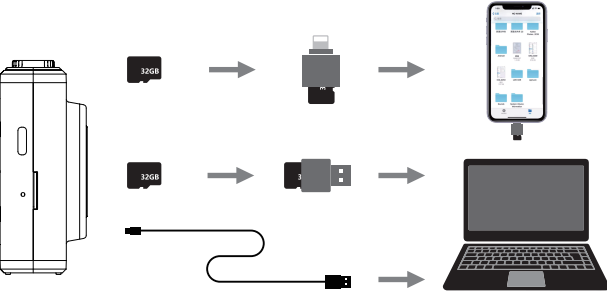

产品参数 Product parameter

产品名称: 数码相机 Product name: Digital camera	电池容量: 800毫安 Battery capacity :800 mah
屏幕尺寸: 2.4英寸IPS高清屏 Screen size: 2.4-inch IPS HD screen	充电时间: 约2小时 Charging time: about 2 hours
输入电压: DC 5V 1A Input voltage :DC 5V 1A	机身重量: 90g Body weight :90g
存储介质: TF卡拓展,最大扩展32GB Storage medium :TF card expansion ,Maximum expansion 32GB	
包装内含: 相机主机、挂绳、数据线、卡通贴纸、使用说明书 Package includes: camera host, lanyard, data cable, cartoon sticker, instruction manual	

常见问题 Frequently asked questions

- 1.提示“内存卡错误/已满”时，请进入设置，格式化内存卡，为避免照片丢失,请每次拍照后及时备份照片，避免因内存卡故障导致照片遗失。
If the message "The memory card is incorrect/full" is displayed, go to Settings and format the memory card. To avoid photo loss, back up the photo immediately after taking pictures to avoid photo loss due to memory card failure.
- 2.如果相机提内存卡错误，请在设置里选择格式化。如相机上无法格式化内存卡时，请使用读卡器或数据线连接电脑进行格式化。
If the camera picks up the memory card incorrectly, select Format in the settings, If the memory card cannot be formatted on the camera, please use a card reader or data cable to connect to the computer to format it.

- 3.当使用中出现问题时，请尝试按住电源键10秒以上重启相机，请取出内存卡再次进行尝试，或者使用针或牙签插入重置孔，恢复出厂设置。
When there is a problem in use, try to restart the camera by holding down the power button for more than 10 seconds, please remove the memory card and try again, or use a needle or toothpick to insert the reset hole and restore the factory settings.
- 4.当相机无法开机时，请检查电量是否充足，请保持3小时以上的充电。
When the camera won't turn on, check if the battery is sufficient, and keep it charged for more than 3 hours.
- 5.当相机无法充电时(充电正常亮红灯)，请检查充电设备和充电线是否正常， 如果检查正常依然无法充电， 请拍摄视频联系客服解决。
When the camera cannot be charged (the charging device and charging cable are normal), please check whether the charging device and charging cable are normal, if the camera still cannot be charged after checking normally, please take a video and contact customer service to solve the problem.
- 注意事项 Precautions ⚠
- 1.相机不具备防水功能，请远离水源，防止溅水。
The camera is not waterproof, so keep it away from water sources to prevent splashing.
- 2.内置3.7V不可拆卸电池， 如有损坏请联系商家进行维修。
Built-in 3.7V non-removable battery, if damaged, please contact the merchant for repair.
- 3.请使用本产品规定电源进行充电，请勿在充电时使用相机； 儿童请在家长指导下充电。
Please use the specified power supply of this product for charging, do not use the camera while charging; Children should be charged under parental guidance.
- 4.本产品内含小部件， 不适合3岁以下儿童使用。
This product contains small parts and is not intended for use by children under 3 years of age.

产品保修卡 Warranty Card

购机日期: _____
Purchase date

购机地址: _____
Purchase platform

联系人: _____
contacts

联系电话: _____
Telephone

联系地址: _____
Contact address

备注: _____
notes

此页为保修的基本凭证，请认真填写并妥善保存。
This page is the basic proof of warranty, please fill it out carefully and keep it properly.

